



Filter, Innenraumluft

Hinweis:

Der Innenraumluftfilter befindet sich im Wageninneren, in Fahrtrichtung rechts hinter dem Handschuhfach.

Ausbau:

Das Handschuhfach durch Lösen der Arretierungen herausnehmen.

(Abb. 1)

Die dahinterliegende Querstrebe ausbauen, die Abdeckung des Innenraumluftfilterkastens abnehmen und den Filter herausnehmen (kann je nach Bauart senkrecht oder waagrecht verbaut sein).

(Abb. 2, 3)

Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

Auf richtigen Sitz des Filterelements achten!

Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!

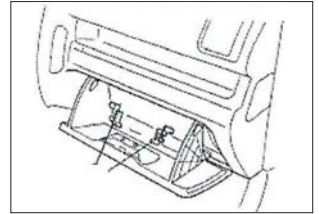


Abb. 1

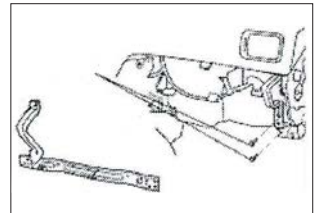


Abb. 2


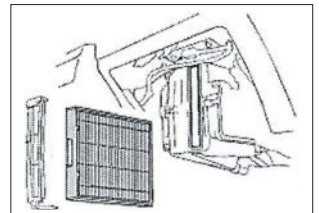


Abb. 3



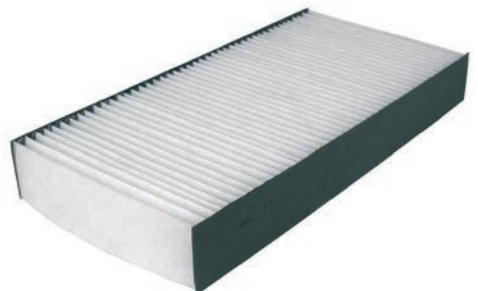

Filter, Cabin Air


Note:

The cabin air filter is installed inside the car at the right side behind the glove box.

Filter Replacement:

Remove the glove box by detaching the locking system.


(pict. 1)

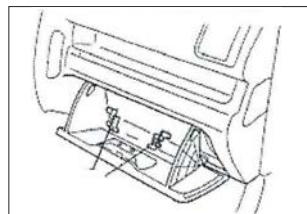

pict. 1

Detach the bracket behind, remove the cover of the cabin air filter case and take out the filter (according to different types it can be installed horizontal or vertical).

(pict. 2 and 3)

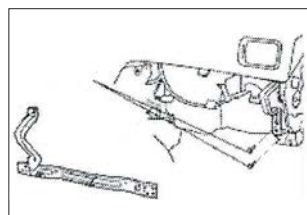


pict. 2

The installation is done in reverse sequence of replacement.

Take care about correct fitting of the filter!

Please think about the environment when you throwing away the old filter!

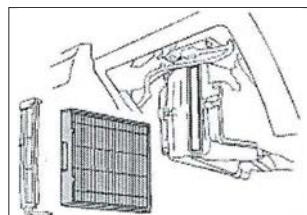

pict. 3

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

